

AIRDRIVE KEYBOARD ASSISTANT QUICK START



Important tips:

- Works only with external USB keyboards, does not work with laptop keyboards
- To get started, press and hold password keys K, B, S together on external keyboard
- For language-adapted keyboards, put the proper **LAYOUT.USB** in the root folder

Always connect the device
in-line between the
keyboard and
computer

To configure, press and hold keys
K B S
together for flash drive mode



```
SHORTCUT - Notepad
File Edit Format View Help
login!=MyUser[TAB]MyPass[ENT]
signature=Sincerely,[ENT]John
forloop=for (int i=0; i<10; i++)
drp=Diabetic retinopathy
```

SHORTCUT.TXT

Keyboard shortcut sequences

```
CONFIG - Notepad
File Edit Format View Help
Password=KBS
KeystrokeSpeed=Medium
TriggerBlank=Yes
TriggerDelay=1
DisableLogging=No
```

CONFIG.TXT

Configuration parameters

For language-adapted keyboards, put the
proper **LAYOUT.USB** file in the root folder

Definition of a shortcut sequence

TRIGGER=SEQUENCE

Type the trigger to launch the sequence

Long word example:

pachy=Pachycephalosaur

You type: *pachy*

The device will type *Pachycephalosaur*

Website login example:

web[ALT]1=MyUser[TAB][2]MyPass[ENT]

You type: *web* and press ALT+1

The device will type *MyUser*, then it will press TAB, wait 2 seconds, type *MyPass* and ENTER


Text with formatting example:

flowers=Don't forget to [CTL]B water the flowers![CTL]B [ENT]Thanks, Ted

You type: *flowers*

The device will type the reminder text, emphasizing *water the flowers!* with CTRL+B (works in most word processors)

To configure the device edit file **CONFIG.TXT** in the flash drive main folder

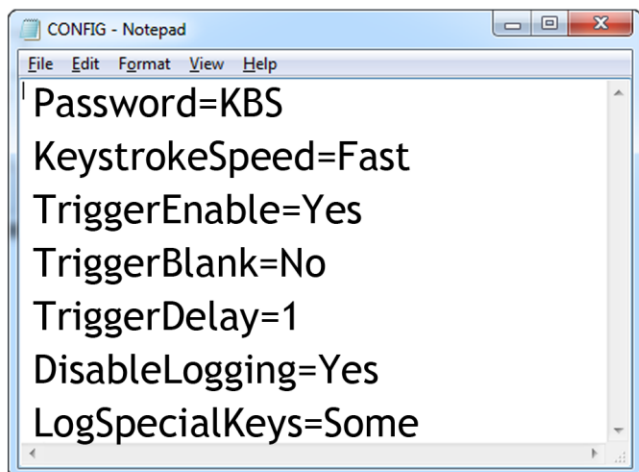

```
CONFIG - Notepad
File Edit Format View Help
Password=KBS
KeystrokeSpeed=Fast
TriggerEnable=Yes
TriggerBlank=No
TriggerDelay=1
DisableLogging=Yes
LogSpecialKeys=Some
```

Memorize your password in case you change it. Otherwise access to the device will be impossible!

Password = ABC (must be 3 keys, please memorize!)
KeystrokeSpeed = Slow / Medium / Fast
TriggerEnable = Yes / No
TriggerBlank = Yes / No
TriggerDelay = 2
DisableLogging = Yes / No
LogSpecialKeys = None / Some / All

The device can also run keystroke scripts, containing commands, loops and delays. Refer to the keystroke scripting guide to get started.